

Cleco

P2567MA-INT
REV D | 2024-02

CellTek™

AC(...)00-R(...)-G0-L00



Copyright © 2024 Apex Brands, Inc. All rights reserved.

Disclaimer

Apex Tool Group reserves the right to modify, supplement, or improve this document or the product without prior notice.

Trademark

Cleco is a registered trademark of Apex Brands, Inc.

Apex Tool Group

670 Industrial Drive
Lexington, SC 29072
USA

 
Manufacturer

Apex Tool Group GmbH


Industriestraße 1
73463 Westhausen
Germany

CTBAW(...)


1

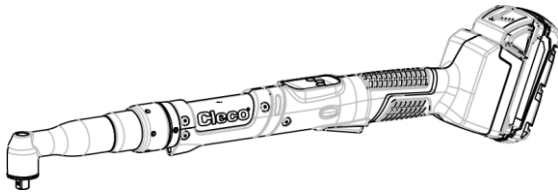


2

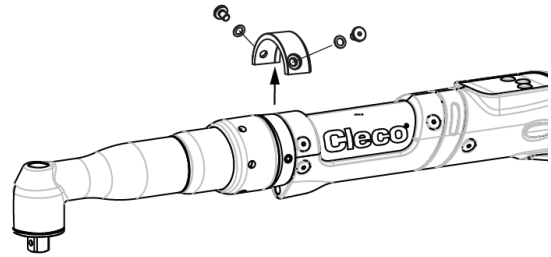 

3

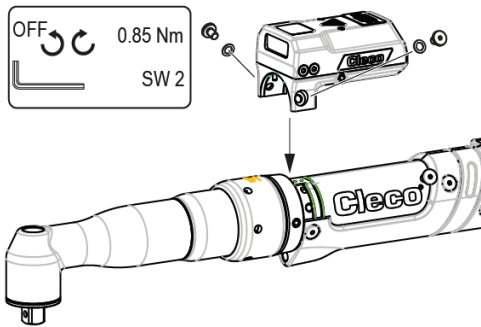 


4

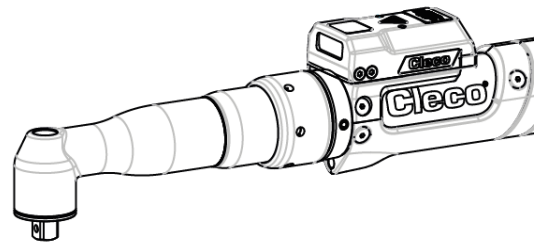 


CTBPW(...)

 
1

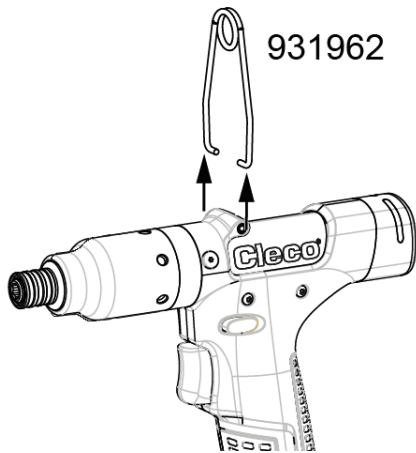


2


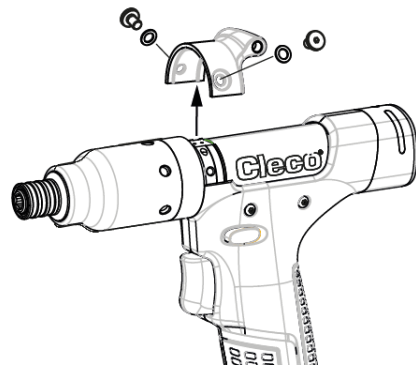 


3

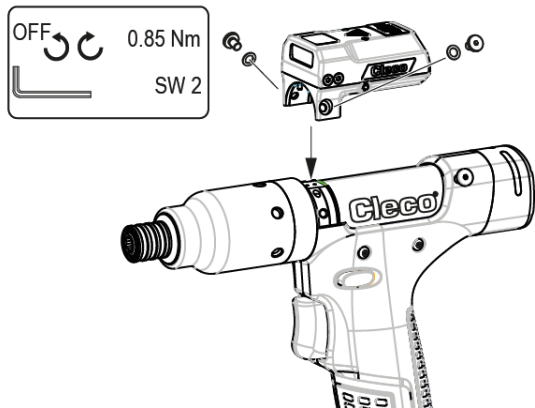 

4

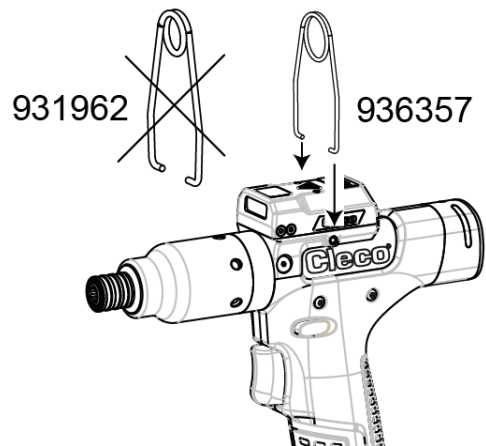 

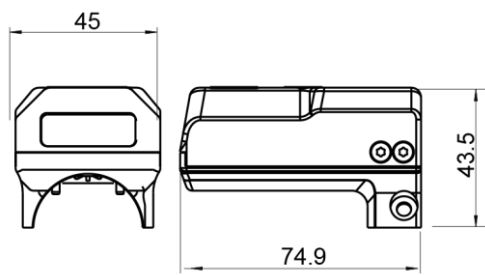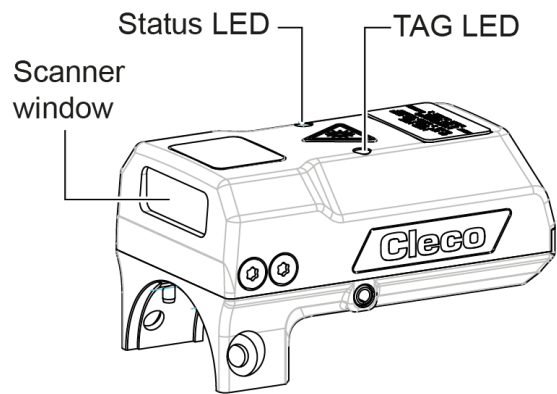  

Nomenclature

Präfix	A	C	P A	00 SA	R0 R2 R3	G0 G1	L00 LD4 LSI LNA LKI
Accessory							
Tool Family	CellTek						
Tool Type	P – Pistol A – Angle Head						
Adapter Size	00 – No specific SA – Stay Alive						
Front Option	R0 – No Reader R2 – Reader 2D Matrix (Laser Aimer) R3 – Reader 2D Matrix (no Laser Aimer)						
Gyro Option	G0 – No Gyro G1 – Gyro						
Localisation	L00 – No TAG LD4 – Ubisense D4 LSI – SIMATIC RTLS LNA – NATEV LKI – KINEXON						

Content

EN

1	About this Document	7
2	Software Request.....	7
3	Product Description	7
3.1	2D Reader	7
4	Installation	7
5	Activating accessories.....	7
6	LED Display.....	7
7	Ambient conditions	8
8	Troubleshooting.....	9
9	Cleaning	9

DE

1	Zu diesem Dokument	10
2	Softwareanforderung.....	10
3	Produktbeschreibung	10
3.1	2D Reader	10
4	Installation	10
5	Zubehör aktivieren.....	10
6	LED-Anzeige	10
7	Umgebungsbedingungen	11
8	Fehlersuche.....	12
9	Reinigung	12

1 About this Document

This document is intended for specialists in installation and maintenance (administrators, maintenance staff, service personnel, owners/operators). It contains information on safe and proper installation. The original language of this document is German.

Other Documents

Number	Document
P2544PM	Programming Manual – S169263 CTBA & CTBP

2 Software Request

- Bootloader: S169353-101 or later
- Controller: e.g., S168813-1.9 or later
- Measurement card: S169263-212 or later


3 Product Description

Tool	Module Order no.
Angle head	ACA00-R2-G0-L00 ACA00-R3-G0-L00
Pistol	ACP00-R2-G0-L00 ACP00-R3-G0-L00

3.1 2D Reader

The 2D-Reader allows you to scan the following barcodes:

Codabar	MSI	2D Aztec
CODE-11	RSS-14	2D Chinese Sensible
CODE-128	RSS-Expanded	2D Codablock A
CODE-39	RSS Limited	2D Codablock F
CODE-93	RSS Limited	2D Datamatrix
EAN-13	UCC/EAN-128	2D PDF417
EAN-8	UPC-A	2D PDF417
Interleaved 2of5	UPC-E	
Trioptic	UPC-E1	
CODE-39		

2D Reader: R2	
	Laser crosshair Laser protection class 2 according to IEC/EN 60825-1



Caution

Danger from laser beams

Eye injury from class 2 laser beam.

- ▶ Do not stare into the activated laser beam.
- ▶ Repair any damage immediately. Damage of the optical components can cause laser radiation.
- ▶ Modifications to the barcode scanner and procedures not outlined in this manual are strictly prohibited.
- ▶ Take defective devices out of operation immediately.

2D Reader: R3



LED light bar, green
Laser protection class 1 according to IEC/EN 60825-1

4 Installation

Angle head: see figure see CTBAW(...), page 3.

Pistol: see figure see CTBPW(...), page 3.



Caution

Winding hazard

Unintentional pressing of the start trigger can cause the drive to turn and cause serious finger injuries.

- ▶ Disconnect the tool from the power supply when converting work.



Note

Malfunction

Accessories can be initialized incorrectly at start-up if the tool was not completely switched off during installation.



- ▶ Before installing, remove the battery and wait approx. 20 seconds for the tool to stop working.



5 Activating accessories

The accessory is active as soon as it has been installed. No additional activation is necessary. For further settings, see the respective software documentation for the control and the documentation for the tool.


6 LED Display

Status LED

Color	Explanation
 Continuous green light	Ready
 Flashing yellow light	Initialization. If more than 20 seconds, see Troubleshooting.

Color	Explanation
 Continuous red light	See Troubleshooting.
 Continuous white light	Software update is running. Do not interrupt the power supply.

TAG LED

Color	Explanation
 Off	LED without function.

7 Ambient conditions

- EMC Limit Class A (electromagnetic immunity for industrial areas)
- Recommendation: ESD workstation on installation

Features	Data
Operation site	Indoors
Working temperature	0 °C – 45 °C
Storage temperature	-25 °C – 70 °C
Type of cooling	Convection (self-cooling)
Relative humidity	10 % – 90 %, no condensation
Working height	Up to 3 000 m (9,843 ft) above sea level
Degree of protection EN 60529	IP40

8 Troubleshooting

Problem	Possible cause	Measure
Module does not work	Tool not active	▶ Press the start switch on the tool
	Module not properly installed	▶ Check installation
	Module not activated by software	▶ Reattach the battery ▶ Restart tool
	Wrong software on tool	▶ Perform software update with correct software
	Tool defective	▶ Replace tool
	Module defective	▶ Replace module
Status LED: Flashlight yellow for longer than 20 seconds	Initialization of the module failed	▶ Reinsert the battery ▶ Restart the tool
	Module not properly installed	▶ Check assembly
	Software out of date	▶ Update CellTek Firmware see <i>software.apextoolgroup.com</i>
	Module defective	▶ Exchange module
	Tool defective	▶ Exchange tool
Status LED: Continuous red light after switching on	Initialization of the module failed	▶ Reattach the battery ▶ Restart tool
	Module defective	▶ Replace module

9 Cleaning

The scanner window must be clean. If the scanner window is dirty, the barcode may not be read.

- ▶ Clean it regularly – or immediately, if it becomes dirty – using a damp cloth.

1 Zu diesem Dokument

Dieses Dokument richtet sich an Fachkräfte für Installation und Instandhaltung (Administratoren, Instandhalter, Service, Betreiber).

Es enthält Informationen zum sicheren und sachgerechten Einbau.

Die Originalsprache dieses Dokuments ist Deutsch.

Weiterführende Dokumente

Nummer	Dokument
P2544PM	Programmieranleitung – S169263 CTBA & CTBP

2 Softwareanforderung

- Bootloader: S169353-101 oder neuer
- Steuerung: z. B. S168813-1.9 oder neuer
- Messkarte: S169263-212 oder neuer


3 Produktbeschreibung

Werkzeug	Modul Bestell-Nr.
Winkelkopf	ACA00-R2-G0-L00 ACA00-R3-G0-L00
Pistole	ACP00-R2-G0-L00 ACP00-R3-G0-L00

3.1 2D Reader

Der 2D-Reader ermöglicht das Lesen folgender (Bar)codes:

Codabar	MSI	2D Chinese Sensible
CODE-11	RSS-14	2D Chinese Sensible
CODE-128	RSS-Expanded	2D Codablock A
CODE-39	RSS-Expanded	2D Codablock F
CODE-93	RSS Limited	2D Datamatrix
EAN-13	UCC/EAN-128	2D micro PDF417
EAN-8	UPC-A	2D PDF417
Interleaved 2of5	UPC-E	
Trioptic CODE-39	UPC-E1	

2D Reader: R2	
	Laser Fadenkreuz Laserschutzklasse 2 nach IEC/EN 60825-1



 
Vorsicht

Gefahr durch Laserstrahlen

Schädigung der Augen durch Laserstrahl Klasse 2.

- ▶ Nicht in aktivierten Laserstrahl blicken.
- ▶ Schäden umgehend beheben. Beschädigungen der optischen Bauteile können Laserstrahlung verursachen.
- ▶ Änderungen am Barcode-Scanner, sowie Vorgehensweisen, die nicht in dieser Anleitung beschrieben werden, sind strengstens untersagt.
- ▶ Defekte Geräte sofort außer Betrieb nehmen.

2D Reader: R3



LED Lichtbalken grün
Laserschutzklasse 1 nach IEC/EN 60825-1

4 Installation

Winkelkopf: siehe Abbildung *siehe CTBAW(...), Seite 3.*

Pistole: siehe Abbildung *siehe CTBPW(...), Seite 3.*



Vorsicht

Aufwicklungsgefahr

Unbeabsichtigtes Betätigen des Startschalters kann zum Drehen des Antriebs führen und schwere Fingererletzungen verursachen.

- ▶ Das Werkzeug bei Umrüstarbeiten von der Stromversorgung trennen.



Hinweis

Funktionsstörung

Zubehör kann beim Start falsch initialisiert werden, wenn das Werkzeug bei der Installation nicht komplett ausgeschaltet war.



- ▶ Vor der Installation den Akku entfernen und ca. 20 Sekunden warten, bis das Werkzeug außer Betrieb ist.



5 Zubehör aktivieren

Das Zubehör ist aktiv, sobald es montiert wurde. Es ist keine zusätzliche Aktivierung notwendig. Weitere Einstellungen siehe jeweilige Softwaredokumentation der Steuerung sowie Dokumentation des Werkzeugs.


6 LED-Anzeige

Status LED

Farbe	Bedeutung
 Dauerlicht Grün	Bereit
 Blinklicht Gelb	Initialisierung. Wenn länger als 20 Sekunden, siehe Fehlersuche.

Farbe	Bedeutung
 Dauerlicht Rot	Siehe Fehlersuche.
 Dauerlicht Weiß	Software-Update läuft. Energieversorgung nicht unterbrechen.

TAG LED

Farbe	Bedeutung
 Aus	LED ohne Funktion.

7 Umgebungsbedingungen

- EMV-Grenzwertklasse A (Störfestigkeit für Industriebereiche)
- Empfehlung: ESD Arbeitsplatz bei Installation

Merkmale	Daten
Einsatzort	In Innenräumen
Arbeitstemperatur	0 °C – 45 °C
Lagertemperatur	-25 °C – 70 °C
Kühlungsart	Konvektion (Eigenkühlung)
Relative Luftfeuchtigkeit	10 % – 90 %, keine Betauung
Arbeitshöhe	Bis 3 000 m über NN
Schutzart EN 60529	IP40

8 Fehlersuche

Problem	Mögliche Ursache	Maßnahme
Modul funktioniert nicht	Werkzeug nicht aktiv	▶ Startschalter am Werkzeug betätigen
	Modul nicht richtig montiert	▶ Montage prüfen
	Modul durch Software nicht aktiviert	▶ Akku neu stecken ▶ Werkzeug neu starten
	Falsche Software auf Werkzeug	▶ Software-Update mit richtiger Software durch führen
	Werkzeug defekt	▶ Werkzeug tauschen
	Modul defekt	▶ Modul tauschen
Status LED: Blinklicht Gelb länger als 20 Sekunden	Initialisierung des Moduls fehlgeschlagen	▶ Akku neu stecken ▶ Werkzeug neu starten
	Modul nicht richtig montiert	▶ Montage prüfen
	Software nicht aktuell	▶ Update CellTek Firmware siehe software.apextoolgroup.com
	Modul defekt	▶ Modul tauschen
	Werkzeug defekt	▶ Werkzeug tauschen
Status LED: Dauerlicht Rot nach Einschalten	Initialisierung des Moduls fehlgeschlagen	▶ Akku neu stecken ▶ Werkzeug neu starten
	Modul defekt	▶ Modul tauschen

9 Reinigung

 
Das Scanner-Fenster muss sauber sein. Bei verschmutztem Scanner-Fenster wird der Barcode eventuell nicht gelesen.

- ▶ Regelmäßig, oder bei Verschmutzung sofort, mit einem feuchten Tuch reinigen.


POWER TOOLS SALES & SERVICE CENTERS

Please note that all locations may not service all products.

Contact the nearest Cleco® Sales & Service Center for the appropriate facility to handle your service requirements.



Sales Center

 



Service Center

NORTH AMERICA | SOUTH AMERICA

DETROIT, MICHIGAN

Apex Tool Group
2630 Superior Court
Auburn Hills, MI 48236
Phone: +1 (248) 393-5644
Fax: +1 (248) 391-6295

LEXINGTON,

SOUTH CAROLINA  
Apex Tool Group
670 Industrial Drive
Lexington, SC 29072
Phone: +1 (800) 845-5629
Phone: +1 (919) 387-0099
Fax: +1 (803) 358-7681

MEXICO

Apex Tool Group
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico
Phone: +52 (442) 211 3800
Fax: +52 (800) 685 5560

EUROPE | MIDDLE EAST | AFRICA

FRANCE

Apex Tool Group SAS
25 Avenue Maurice Chevalier - ZI
77330 Ozoir-La-Ferrière
France
Phone: +33 1 64 43 22 00
Fax: +33 1 64 43 17 17

GERMANY

Apex Tool Group GmbH
Industriestraße 1
73463 Westhausen
Germany
Phone: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

HUNGARY

Apex Tool Group
Hungária Kft.
Platánfa u. 2
9027 GyőrHungary
Phone: +36 96 66 1383
Fax: +36 96 66 1135

ASIA PACIFIC

AUSTRALIA

Apex Tool Group
519 Nurigong Street, Albury
NSW 2640
Australia
Phone: +61 2 6058 0300

CHINA

Apex Power Tool Trading
(Shanghai) Co., Ltd.
2nd Floor, Area C
177 Bi Bo Road
Pu Dong New Area, Shanghai
China 201203 P.R.C.
Phone: +86 21 60880320
Fax: +86 21 60880298

INDIA

Apex Power Tool Trading
Private Limited
Gala No. 1, Plot No. 5
S. No. 234, 235 & 245
Indialand Global
Industrial Park
Taluka-Mulsi, Phase I
Hinjawadi, Pune 411057
Maharashtra, India
Phone: +91 020 66761111

JAPAN

Apex Tool Group Japan
Korin-Kaikan 5F,
3-6-23 Shibakoen, Minato-Ku,
Tokyo 105-0011, JAPAN
Phone: +81-3-6450-1840
Fax: +81-3-6450-1841

KOREA

Apex Tool Group Korea
#1503, Hibrand Living Bldg.,
215 Yangjae-dong,
Seocho-gu, Seoul 137-924,
Korea
Phone: +82-2-2155-0250
Fax: +82-2-2155-0252

Cleco

Apex Tool Group, LLC

Phone: +1 (800) 845-5629

Phone: +1 (919) 387-0099

Fax: +1 (803) 358-7681

www.ClecoTools.com

www.ClecoTools.de